

# FancyMiracle

## Electric Oven

فرن كهربائي

### INSTALLATION MANUAL

فرن كهربائي





**Warning:** Electrical instructions to respect

Power supply: the electrical installation must be in accordance with the local standard, in particular for earthing plug. We cannot be held responsible for any incident caused by a faulty electrical installation.

Advices for the electrical installation of your device:

---

- Don't use receptacle extension, adapter or multiple receptacle
- Never eliminate the earthing plug
- The electrical outlet must be easily accessible but out of reach of children

In case of doubt, please contact your Installer.

---

**تعليمات الكهربائية يتعين مراعاتها :**

الطاقة: التركيب الكهربائي يجب أن يكون وفقا للمعيار، وخصوصا التوصيل الأرضي. لسنا مسؤوليين عن أي حادث بسبب التركيبات الكهربائية الخاطئة.

نصائح التركيب الكهربائي لجهازك:


-لا تمدد الكابلات الكهربائية ولا تستعمل المحول

- لا يجب إزالة التوصيل الأرضي

-مأخذ التيار الكهربائي يجب أن يكون في متناول الجميع ولكن بعيدا عن متناول الأطفال

في حالة الشك يرجى الاتصال المثبت الخاص بك.

## PARTS IDENTIFICATION

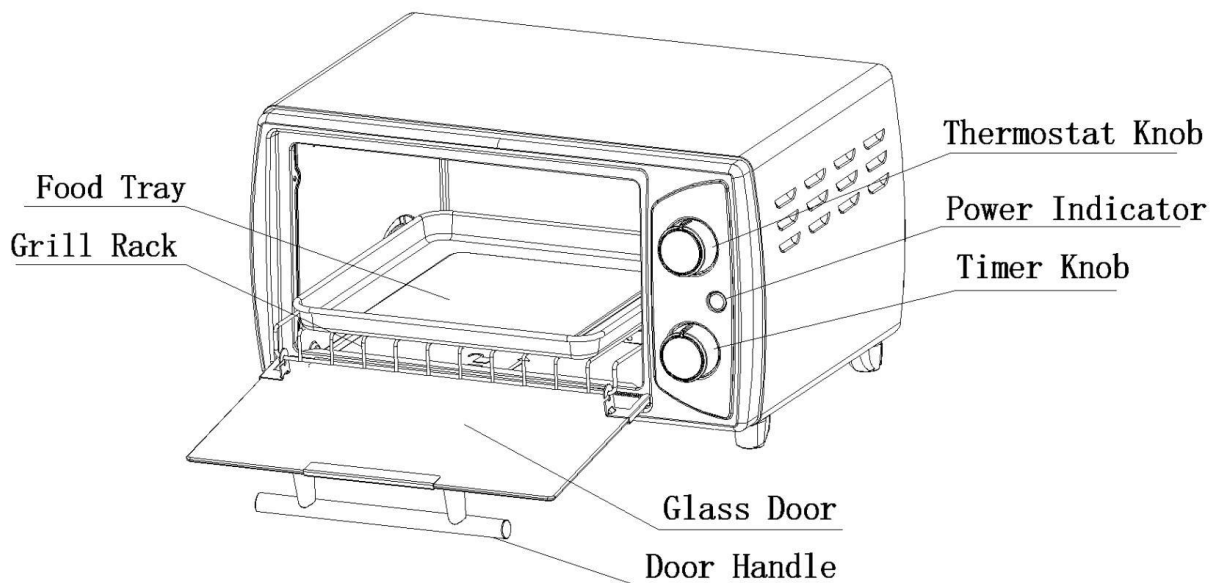

## IMPORTANT SAFEGUARDS AND PRECAUTIONS

### SAVE THESE INSTRUCTIONS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions.
2. Do not touch hot surfaces. Use handle or knobs.
3. Close supervision is necessary when any appliances are used by or near children.
4. To protect against electric shock, do not place any part of the electric oven in water or other liquid.
5. Do not let cord hang over edge of table or counter, or touch hot surfaces.
6. Do not operate appliance with damaged cord or plug or after the appliance malfunctions, or has been damaged in any manner, return appliance to the nearest Authorized Service Center for examination, repair, or adjustment.
7. When operating the oven, keep at least four inches of space on all sides of the oven to allow for adequate air circulation.
8. Unplug from outlet when not in use, or before cleaning.
9. To disconnect, turn the control to STOP, then unplug the plug. Always hold the plug, but never pull the cord.

10. Do not cover BAKE TRAY or any part of oven with metal foil. This may cause overheating of the oven.
11. Do not clean with metal scouring pads.
12. Oversized foods or metal utensils must not be inserted in an electric oven as they may create a fire or risk of electric shock.
13. A fire may occur if the oven is covered or touching flammable material, including curtains, draperies, walls, and the like, when in operation. Do not store any item on the oven during operation.
14. Extreme caution should be exercised when using containers constructed if anything other than metal or glass.
15. Do not place any of the following materials in the oven: cardboard, plastic, paper, or anything similar.
16. Do not store any materials, other than manufacturer's recommended accessories, in this oven when not in use.
17. Always wear protective, insulated oven gloves when inserting or removing items from the hot oven.
18. This appliance has a tempered, safety glass door. The glass is stronger than ordinary glass and more resistant to breakage. Tempered glass can break, but the pieces will not have sharp edges. Avoid scratching door surface or nicking edges. If the door has a scratch or nick, do not use.
19. Do not use outdoors.
20. Do not use appliance for other than intended use.
21. This appliance is for HOUSEHOLD USE ONLY.
22. The temperature of the door or the outer surface may be higher when the appliance is working.

## HOW TO USE

### PREPARATION BEFORE USE

Before using your electric oven for the first time, be sure to:

1. Read all instructions included in this manual.
2. Make sure oven is unplugged and Time Knob is in the "OFF" position.
3. Remove all accessories. Wash in hot soapy water or in dishwasher.
4. Thoroughly dry all accessories and re-assemble in oven. Plug oven into outlet and you are ready to use your new electric oven with Grill Rack and Food Tray.
5. It may result in smell or smoke for the first use. This is normal. It is due to the protective substance on heating elements, which avoids salt effects during shipping from factory. So it is recommended operating oven dry for about 15 minutes at the first, moreover, making sure to keep good ventilation of the room.

Please familiarize yourself with the following oven functions and accessories prior to first use:

- **Function Knob:** Choose desired function.
- **Timer Knob:** Turn control to the right (clockwise) and the oven will turn off automatically at the end of the selected time and a bell will ring. When setting the Timer to less than 5 min, turn it to more than 6 min. and then back to the selected time.
- **Power Indicator:** It is illuminated whenever oven is turned on.
- **Grill Rack:** For toasting, baking, and general cooking in casserole dishes and standard pans.
- **Food Tray:** For use in broiling and roasting meat, poultry, fish, and various other foods.

### Operation

- Place food to be cooked directly on to wire rack/in food tray.
- Close the oven door
- Select proper heating mode
- Preset proper cooking time and start the oven.
- Make sure to turn Timer Knob to “0” for turning off the oven when cooking is completed.

## CLEANING AND CARE

### MAINTENANCE:

This appliance has been designed to operate over a long period of time with a minimum of maintenance. Continuous satisfactory operation depends upon proper care and regular cleaning.

Warning! Before performing any maintenance or cleaning of this appliance, disconnect the appliance from the electrical supply.

### CLEANING:

To protect against the risk of electrical shock, do not immerse the unit, cord or plug in water or other liquid. The exterior surface of the appliance should be cleaned with a clean damp cloth only.

Wash all accessories in hot sudsy water or in a dishwasher. Wipe the door with a clean damp cloth, and dry with a paper or cloth towel. Clean exterior with damp cloth.



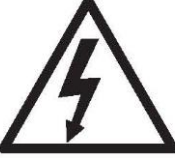

**DO NOT USE ABRASIVE CLEANERS ON ANY PART OF THIS APPLIANCE. ALWAYS UNPLUG THE OVEN AND ALLOW IT COOLING BEFORE CLEANING.**


**DRY ALL PARTS AND SURFACES THOROUGHLY PRIOR TO PLUGGING**

## OVEN IN AND USING!

### STORAGE:

Unplug unit, allow cooling, clean before storing. Store electric oven in its box at a clean, dry place. Never store appliance while it is hot or still plugged in. Never wrap cord tightly around the appliance, use the Cord Storage area on the bottom of the back of the oven. Do not put any stress on the cord where it enters the unit, as it could cause the cord to fray and break.

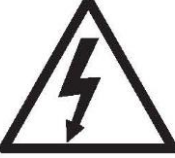	<b>CAUTION</b> <b>RISK OF ELECTRIC SHOCK</b>	
	<b>DO NOT OPEN</b> The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user of the presence of uninsulated “dangerous voltage” within the product’s enclosure: that may be of sufficient magnitude to constitute a risk of electric shock to person.	
	The exclamation point within an equilateral triangle is intended to alert the user of the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.	

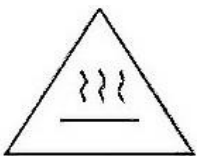

### CAUTION!

Caution: The temperature of the accessible surface may be high when the appliance is operation.

### SPECIFICATION

Model No.	WF-1000D
Voltage	220-240V~


Frequency	50/60Hz
Power	1000W

## WEE / ENVIRONMENTAL PROTECTION




### **Disposal of Electrical and Electronic Equipment**

Do not dispose of this product with household waste. For the proper treatment, recovery and recycling please take this product to the appropriate waste collection point. If you are unsure where this may be, please contact your local authority. Improper disposal may be harmful to the environment

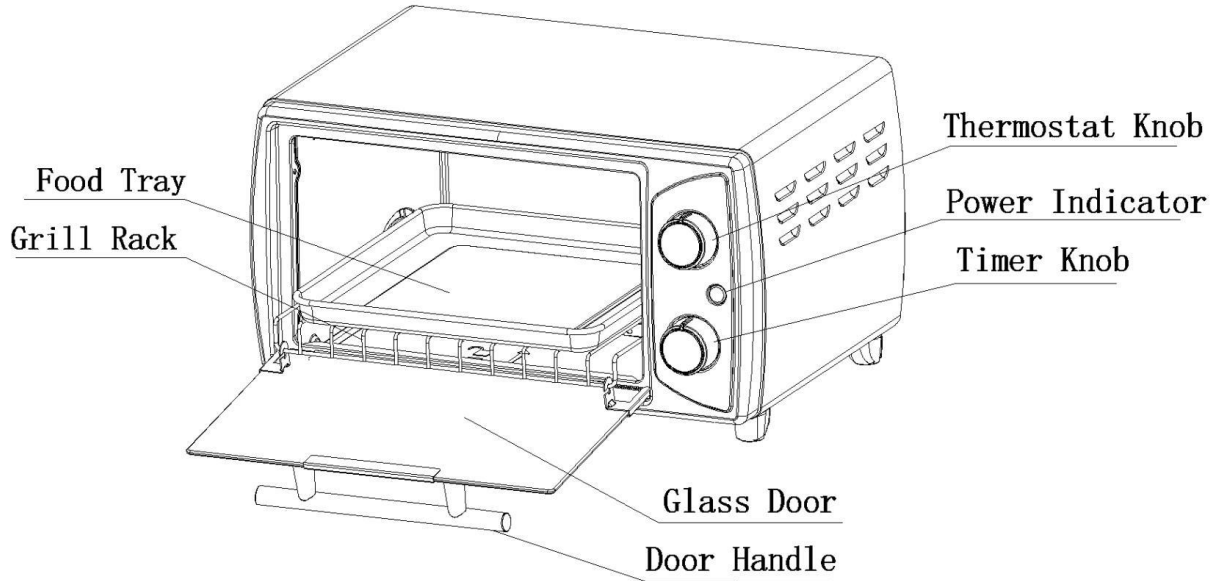

- الشبكة: Grill rack  
 صينية الطهي : Food tray  
 باب زجاجي : Glass door  
 مقبض الباب : Door handle  
 زر وظيفة : Function knob  
 الموقت : Timer knob  
 المؤشر : Power indicator

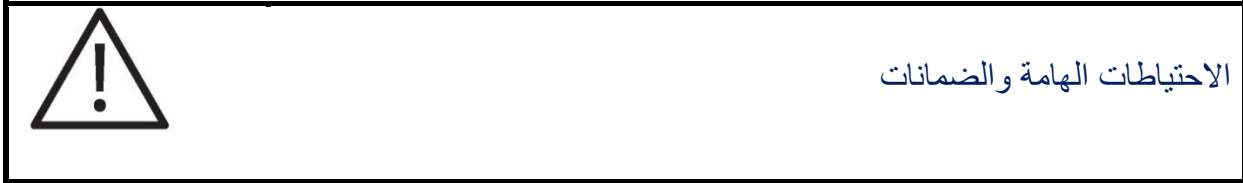

وفر هذه التعليمات

عند استخدام الأجهزة الكهربائية، وينبغي دائما أن يتبع الاحتياطات الأساسية، بما في ذلك ما يلي:  
 1. قراءة جميع التعليمات.

2. لا تلمس الأسطح الساخنة. استخدام مقبض أو المقابض.

3. الإشراف الدقيق ضروري عند استخدام الأجهزة من قبل أو بالقرب من الأطفال.

4. للحماية ضد الصدمات الكهربائية، لا تضع أي جزء من الفرن في الماء أو السوائل الأخرى  
 5. لا تدع الحبل على طاولة أو مضادة، أو لمس الأسطح الساخنة.

6. لا تقم بتشغيل الجهاز مع سلك معطوب أو بعد حدوث عطل يجب نقل الوحدة إلى أقرب مركز خدمة معتمد لفحص وإصلاح أو ضبط.

7. عند استخدام الفرن، يجب الحفاظ على أربع بوصات على الأقل من المساحة على جميع الاطراف من الفرن للسماح للدوران الهواء الكافي.

8. افصل الوحدة عندما لا تكون قيد الاستعمال أو قبل التنظيف.

9. عند إيقاف الوحدة، قم بالضغط على « STOP » ، ولكن لا تسحب الحبل.

10. لا تغطي الفرن طبق الخبز أو جزء مع الصفائح المعدنية. هذا يمكن أن يسبب ارتفاع درجة حرارة الفرن.

11. لا تنظف بمواد معدنية.

12. الأطعمة كبير جدا أو أواني معدنية يجب ألا يدخل في فرن كهربائي لأنها قد تتسبب في نشوب حريق أو صدمة كهربائية.

13. قد يحدث حريق إذا تم تغطية الفرن أو لمس مواد قابلة للاشتعال، بما في ذلك الستائر والجدران وغيرها يجب أن 14 يجب توخي الحذر الشديد عند استخدام حاويات من المعدن أو الزجاج.

15. لا تضع أي من المواد التالية في الفرن: من الورق المقوى والبلاستيك أو شيئا من هذا القبيل.

16. لا تخزن المواد، وغيرها من الإكسسوارات المصنعة الموصى بها، في هذا الفرن عندما لا تكون قيد الاستعمال.



17. دائما ارتداء القفازات الواقية المعزولة عند إدخال أو إزالة عناصر من الفرن الساخن.
18. هذا الجهاز لديه خفف زجاج الباب السلامة. الزجاج هو أقوى من الزجاج العادي وأكثر مقاومة للكسر. تجنب خدش سطح الباب
19. لا تستخدم الجهاز في الهواء الطلق.
20. لا تستخدم الأجهزة لإستعمالات أخرى
21. وهذا الجهاز هو لإستعمالات المنزلية فقط
22. درجة حرارة الباب أو السطح الخارجي قد تكون أعلى خلال العملية.

## كيفية الاستخدام

### التحضير قبل الاستعمال

قبل استخدام الفرن الخاص بك للمرة الأولى، كن متأكدا من:

1. قراءة جميع التعليمات في هذا الدليل.
2. تأكد من أن الفرن غير موصول وزر الوقت هو "OFF".
3. إزالة جميع المحتويات. تغسل بالماء الساخن والصابون أو في غسالة الصحون.
4. يجف تماما جميع المحتويات و توضع مرة أخرى في الفرن.
5. يمكن أن تشتم رائحة أو دخان أول استخدام. وهذا أمر طبيعي. و من المقرر أن مادة واقية على عناصر التدفئة، لتجنب آثار الملح أثناء الشحن من المصنع. ولذلك أوصت بأن الفرن يعمل الجاف لمدة 15 دقيقة لأول، ومع ذلك، والتأكد من الحفاظ على التهوية السليمة للغرفة.

يرجى التآلف مع وظائف وأكسسوارات الفرن قبل أول استخدام:

- درجة الحرارة زر: اختر درجة الحرارة المطلوبة من 100 °C إلى 250 °C.
- وظيفة زر: حدد الوظيفة المطلوبة.
- زر الموقت: إيقاف عنصر التحكم إلى اليمين (في اتجاه عقارب الساعة) وسوف يتوقف الفرن تلقائيا في نهاية الوقت المحدد وسوف يرن جرس.
- مؤشر الطاقة: يضيئ في وضع التشغيل.
- علبة الغذاء: لاستخدامها في حارق واللحوم تحميص والدواجن والأسماك والأطعمة المختلفة الأخرى.
- الدبوس: لاستخدامها في حارق وتحميص الدجاج وغيرها من الأطعمة.
- مقبض: للاستخدام عن طريق اتخاذ فرن المشواة شوكة.

## العملية

- ضع الطعام المراد طهيه مباشرة على الشبكة المعدنية / صينية.
- إغلاق باب الفرن
- حدد درجة الحرارة المناسبة لمقبض الباب درجة الحرارة.
- وقت الطهي السليم، وضبط وبدء تشغيل الفرن.
- تأكد من تشغيل جهاز ضبط الوقت مقبض الباب ل"0" لإيقاف الفرن عند إنتهاء الطهي

## الصيانة:

تم تصميم هذا الجهاز ليعمل على مدى فترة طويلة من الزمن مع الحد الأدنى من الصيانة. عملية مرضية مستمرة تعتمد على الرعاية المناسبة والتنظيف المنتظم.

تحذير! قبل تنفيذ أي تنظيف أو صيانة هذه الوحدة، افصل وحدة من الطاقة الكهربائية.

## التنظيف:

للحماية من خطر حدوث صدمة كهربائية، لا تزج الأجهزة، والحبل أو سد العجز في الماء أو أي سائل أخرى. يجب تنظيف السطح الخارجي للجهاز بقطعة قماش مبللة.



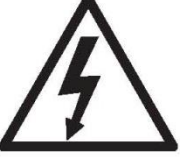

الفرن لديه طلاء داخلي سريع التنضيف. إذا رغبت في ذلك، مسح الجدران مع قطعة قماش مبللة بمنظف لطيف.

غسل جميع الملحقات في الماء الساخن والصابون أو في غسالة الصحون. مسح الباب مع قطعة قماش نظيفة ويمسح بقطعة منشفة ورقية أو الأنسجة. تنظيف خارج بقطعة قماش مبللة.


احرص دائما على فصل الفرن وبتترك ليبرد قبل التنظيف.  
جفف جميع أجزاء والسطوح بتمعن قبل إستعمال الفرن

**التخزين:**

افصل الأجهزة، والسماح لتبرد، نظيفة قبل تخزينها. أربعة مخزن الكهربائية هو علبة في مكان نظيف وجاف. أبدا الأجهزة مخزن الأبيض كان الجو حارا أو لا يزال توصيله. أبدا التفاف الحبل بإحكام حول الأجهزة، استخدم منطقة تخزين الحبل على الجزء السفلي من الظهر من الفرن. لا تضع الضغط على الحبل حيث يدخل الوحدة، كما يمكن أن يؤدي ذلك إلى الحبل المعمة وكسر.

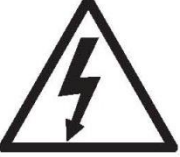	<b>خطر صدمة كهربائية</b>	
	لا تفتح البرق فلاش مع رمز السهم داخل مثلث متساوي الأضلاع المقصود، لتنبيه المستخدم إلى وجود "الجهد خطير" داخل العلبة المنتج: التي قد تكون ذات حجم كاف لتشكيل خطرا صدمة كهربائية للأشخاص	
	والقصد من علامة تعجب داخل مثلث متساوي الأضلاع لتنبيه المستخدم إلى وجود تعليمات التشغيل والصيانة الخدمات في النشرة المرفقة	

**تحذير!**



تحذير: درجة حرارة السطح يمكن الوصول إليها قد تكون مرتفعة عندما يعمل الجهاز.

**الخصيات**

WF-1000D	نموذج
220-240V~	الجهد
50/60Hz	تردد
1000W	قوة

## حماية البيئة



التخلص من المعدات الكهربائية والإلكترونية  
لا تتخلص من هذا المنتج مع النفايات المنزلية. لتلقي العلاج والتعافي وإعادة التدوير، يرجى اتخاذ هذا المنتج  
إلى الموقع المناسب لجمع النفايات. إذا كنت لا تعرف أين يمكن أن يكون، يرجى الاتصال بالسلطة المحلية  
الخاصة بك.  
قد يكون تصرف غير لائق ضررا على البيئة